

Gunner Ridge Companies, LLC

# **MAGIK KLEENER**

-

## **GRAIN CLEANER**

---

### **OPERATIONS MANUAL**

-

#### **Gate Operations**

---

**2904 12<sup>th</sup> St  
Harlan, Iowa 51537  
712-755-3871 (o)  
(888) 801-1536 (f)**

**[magikkleener@yahoo.com](mailto:magikkleener@yahoo.com)  
[www.magikkleenersales.com](http://www.magikkleenersales.com)**

## Gate Opening Indicators

There is an indicator placed directly below the inspection door on the front of the cleaner.

The indicator tells how far the grain flow-through (cleaning) gates are open.

When the pin is on:

- 0 – The gate(s) are completely Closed
- 1 – The gate(s) are open 1.5 inch
- 2 – The gate(s) are open 2.5 inch
- 3 – The gate(s) are completely open

\*\* (typical setting used is between 1 and 2)

This can vary based on the capacity flowing through the cleaner.

The desired setting spreads the grain across the screen for proper cleaning, while meeting your capacity needs.

Note:

- The indicator is for reference only and not for operating the actual gate. Gate operation is controlled by the lever on the back of the cleaner
- The pin does not need to be directly on a certain number and can be placed anywhere.
- When trying to determine the best opening for your set up it is best to move the gates in small intervals and not necessarily from number to number (1 to 2 or 2 to 3)

